



Torque King Electric RTR RC Monster Truck Casing Replacement

This guide serves as a prerequisite only and it shows how to remove the truck's casing.

Written By: Maximiliano Cortes



INTRODUCTION

This guide does not require any tools.

Step 1 — Casing



- From the top view, remove each of the four pins that hold the casing in place.

Step 2



- Slowly pull the casing up to remove it.

To reassemble your device, follow these instructions in reverse order.

